

## Sprinkler timer PNI WT05

IMPORTANT, PLEASE READ!




WHEN EXPECTING FREEZING TEMPERATURES. TIMERS SHOULD BE REMOVE FROM THE HOSE FAUCET AND STORED INDOORS TO AVOID POTENTIAL FREEZE DAMAGE.



FILTER TRAPS DIRT. IN ORDER TO PROLONG THE LIFESPAN OF TIMER. CLEAN FILTER REGULARY AND REPLACE WORN.

### TIMER FEATURES

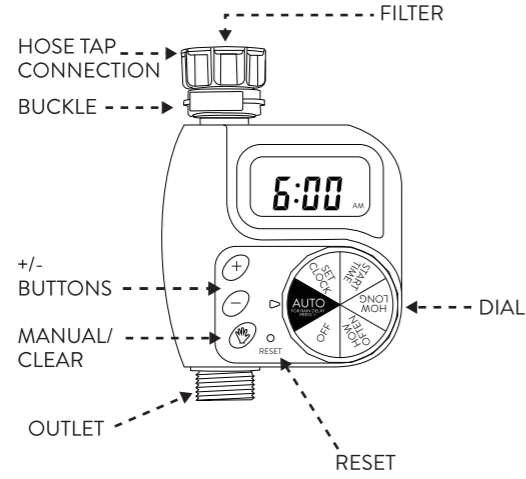

DIAL-Rotate the dial to customize your watering schedule

RESET-Press to clear all programming  
MANUAL/CLEAR - Press to water manually or to clear programming within a specific program

+/-BUTTONS - Use these buttons to adjust time and system set up.



AUTO - Timer waters according to your customized schedule

SET CLOCK - Set the time of day  
START TIME - Select what time you would like watering to start

HOW LONG - Determine how long to water

HOW OFTEN - Choose how often you will water

OFF-Turn off all watering

### QUICK START

#### INSTALLING THE BATTERIES

- 1.Remove the tray on the back of the timer by sliding or pulling it out.
- 2.Insert two AA(1.5v) alkaline batteries (not included) and replace the tray.

NOTE:Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it locks in place and does not pull out easily. Used up or dead batteries must be removed from the timer and disposed of properly. Batteries should be removed from the timer at the end of the watering season and replaced with new ones at the beginning of the next watering season.


#### PROGRAMMING THE TIMER

##### SET CLOCK



- 1.Turn dial to SET CLOCK.
- 2.Using the +/--buttons,set the time of day. (hold button for quick advance/reverse)
- 3.Turn dial to save changes.

#### START TIME

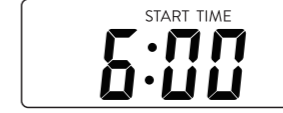

- 1.Turn dial to START TIME
- 2.Using the +/--buttons, set your start time. (hold button for quick advance/reverse)
- 3.Turn dial to save changes.

#### HOW LONG



- 1.Turn dial to HOW LONG
2. Using the +/- buttons, select watering duration from 1 to 300 minutes
- 3.Turn dial to save changes.

#### HOW OFTEN



- 1.Turn dial to HOW OFTEN
  - 2.Using the +/- buttons, set your watering frequency.You can choose to water every 6hours,12hours, or from 1 to 7 days.
- NOTE:1 is every day,2 is every other day,etc.
- 3.Turn dial to save changes.



Download the Warranty Certificate

The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.

ONLINE SHOP SRL declares that Sprinkler timer PNI WT05 complies with the Directive EMC 2014/30/EU. The full text of the EU declaration of conformity is available at the following Internet address: <https://www.mypni.eu/products/10082/download/certifications>

#### EU Simplified Declaration of Conformity

this process, you can use the product normally.

screen show 5:00, it will be stop watering. After

Then press hand button again. After the

screen show 5:00 it will be watering.

water, press the hand button. When the

After you install all the parts and connect the

#### ATTENTION



If you want to take out the product from tap. You just need take out buckle at first.It will be easy to take out.

#### DISASSEMBLY

product and port.

You should put the port in the product, then take this buckle in connection of

#### INSTALLATION

For outdoor use with cold water only

#### WARNINGS

Minimum: Keep away from freezing

Maximum: Do not exceed 80°

WORKING TEMPERATURE

Maximum:100 psi

Minimum:25psi

WORKING WATER PRESSURE

HOW LONG is set to desired time.

WATER WONT OFF.

CHECK IF:

Timer is set to AUTO.  
Hose faucet is on.  
Batteries are low.  
Clock is set to correct, including AM and PM.  
Rain Delay is on. Disable if necessary.

#### TIMER DOES NOT WATER.

CHECK IF:

Clock is set to correct time, including AM and PM.  
Start time is set to desired time, including AM and PM.  
Hose faucet is on.  
Batteries are low.  
Rain Delay is on. Disable if necessary.

#### WATER DOES NOT COME ON AT DESIRED TIME.

CHECK IF:

TRUBLESHOOTING

The faucet will be watering, when "START" mark play on LCD.  
2.Then press the MANUAL button again,it will stop watering.



MANUAL / HAND WATERING  
This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1.With the dial on AUTO,press the + button to select a delay of 24hrs,48hrs,or 72hrs. (15 seconds without operation, automatically exit)  
2.Screen will flash between clock and hours remaining before programmed cycle resumes.  
3.To remove rain delay. Turn dial to OFF and then back to AUTO.

Rain delay allows you to postpone watering for a set period of time. To access the rain delay. Follow the steps below.



#### ADDITIONAL FEATURES

Turn your dial to AUTO to allow your timer to Water according to programmed time. Station, duration and frequency.

Congratulations! Your timer is now programmed.

## Programator pentru irigare PNI WT05

### NOTE IMPORTANTE!




CAND SUNT AȘTEPTATE TEMPERATURI SUB NIVELUL DE INGHET, DECONECTATI PROGRAMATORUL DE LA FURTUN SI DEPOZITATI-L LA INTERIOR.



CURATATI FILTRUL CU REGULARITATE SI INLOCUITI-L CAND ESTE PEA UZAT.

### PREZENTARE

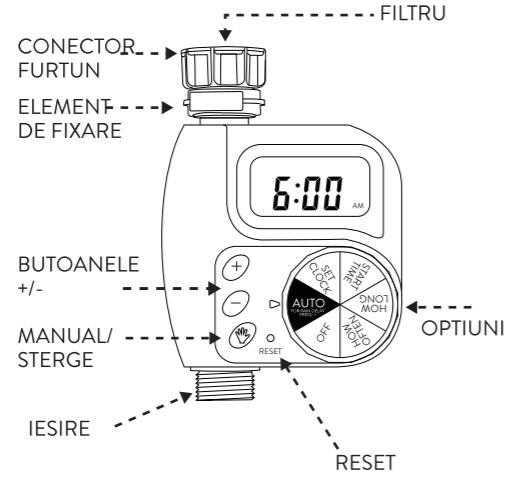

### OPTIUNI-Rotiti pentru a selecta programul de irigare

RESET-Asasati pentru a reveni la setarile din fabrica MANUAL/STERGE - Asasati pentru a trece pe modul manual sau pentru a sterge setarile unui anumit program

BUTOANELE +/- - Asasati pentru setarea orei si pentru alte setari.



AUTO - Programatorul iriga in functie de orarul setat

SET CLOCK - Setati ora

START TIME - Selectati cand ati dori sa porneasca irigarea

HOW LONG - Selectati durata irigarii

HOW OFTEN - Selectati cat de des doriti sa irigati

OFF - Opriti irigarea

### GHID RAPID

#### INSTALAREA BATERIILOR

1. Indepartati capacul de pe spatele programatorului.
2. Introduceti doua baterii alcaline AA(1.5v) (nu sunt incluse) si puneti capacul la loc.

NOTA: Inchideti bine capacul de pe compartimentul pentru baterii pentru a asigura rezistenta la apa. Cand bateriile s-au descarcat, inlocuiti-le cu baterii noi. La sfarsitul sezonului de irigare, scoateti bateriile din programator.


#### PROGRAMARE

##### SETARE ORA



1. Rotiti butonul de optiuni pe SET CLOCK.
2. Cu ajutorul butoanelor +/-, setati ora. (tineti apasat pentru a avansa mai rapid)
3. Rotiti butonul de optiuni pentru a salva setarea.

#### ORA PORNIRE IRIGARE

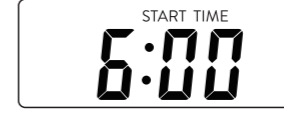

1. Rotiti butonul de optiuni pe START TIME
2. Cu ajutorul butoanelor +/-, setati ora de pornire. (tineti apasat pentru a avansa mai rapid)
3. Rotiti butonul de optiuni pentru a salva setarea.

#### DURATA IRIGARE




1. Rotiti butonul de optiuni pe HOW LONG
2. Cu ajutorul butoanelor +/-, selectati durata de la 1 la 300 minute
3. Rotiti butonul de optiuni pentru a salva setarea.

#### FRECVENTA IRIGARE



1. Rotiti butonul de optiuni pe HOW OFTEN
  2. Cu ajutorul butoanelor +/-, setati frecventa de irigare. Optiuni disponibile: la 6 ore, la 12 ore sau intre 1 si 7 zile
- NOTA: 1 este in fiecare zi, 2 este o data la doua zile etc.
3. Rotiti butonul de optiuni pentru a salva setarea.

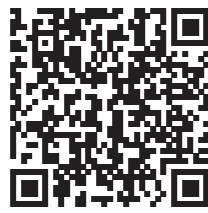

#### Descarcati Certificatul de garantie

ONLINESHOP SRL declara ca Programator pentru irigare PNI WT05 este in conformitate cu Directiva EMC 2014/30/EU. Textul integral al declaratiei UE de conformitate este disponibil la urmatoarea adresa de internet: <https://www.mypni.eu/products/10082/download/certifications>

#### Declaratie UE de conformitate simplificata

Dupa ce ati facut acest test, puteti seta programatorul.

Pe ecran apare **6:00** si irigarea se va opr.

Apasati din nou acest buton

Pe ecran apare "start" **6:00** si va porni irigarea.

Apasati acest buton

Dupa ce ati conectat programatorul la instalatia de irigare,

#### TESTARE



Daca doriti sa scoateti programatorul din instalatia de irigare, desfaceti mai intai accesoriul de fixare.

#### DEZASAMBLARE

apoi acest accesoriu de fixare

#### INSTALARE

Programatorul se utilizeaza doar cu apa rece.

#### AVERTIZARI

Maxim: < 80° (pana la nivelul de inghet)

TEMPERATURA DE LUCRU

Maxim: 100 psi

Presiune apa recomandata

- Durata de irigare a fost setata corect.

IRIGAREA NU SE OPRESTE. VERIFICATI DACA:

- Programatorul este setat pe AUTO.
- Robinetii sunt deschisi.
- Bateriile sunt incarcate.
- Ora a fost setata corect, inclusiv AM si PM.
- Functia DELAY este activa. Dezactivati-o daca este activa.

IRIGAREA NU PORNESTE. VERIFICATI DACA:

- Ora a fost setata corect, inclusiv AM si PM.
- Functia DELAY este activa. Dezactivati-o daca este activa.

IRIGAREA NU PORNESTE LA ORA STABILITA. VERIFICATI DACA:

#### PROBLEME SI SOLUTII

1. Irigarea va porni, cand pe ecran apare "START".
2. Apasati din nou butonul MANUAL pentru a intrupe irigarea manuala.




- Programatorul este setat pe AUTO.
- Robinetii sunt deschisi.
- Bateriile sunt incarcate.
- Ora a fost setata corect, inclusiv AM si PM.
- Functia DELAY este activa. Dezactivati-o daca este activa.

#### IRIGARE MANUALA

1. Rotiti butonul de optiuni pe AUTO, apoi apasati pe butonul MANUAL.
- Acasta optiune va permite sa udati fara sa fiti intrerupt de programul setat.
- Pentru a seta functia MANUAL, urmati pasii de mai jos.

1. Rotiti butonul de optiuni pe AUTO, apasati + pentru a seta o amanare de 24 ore, 48 ore sau 72 ore. (daca timp de 15 secunde nu faceti nici o operatiune, programatorul iese automat din setare)
2. Pe ecran va clipi ora si timpul ramas pana cand va fi reluata irigarea.
3. Pentru a dezactiva functia DELAY, apasati pe + pana ajungeti la optiunea OFF.

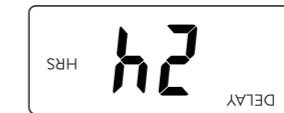

#### AMANARE (CAND PLOUA)

#### FUNCTII SUPLEMENTARE

Acum programatorul a fost setat. Rotiti butonul de optiuni pe AUTO. Programatorul va iriga in functie de setarile facute: ora, durata, frecventa.