

Manual de utilizare

Sirena de interior wireless PNI A014



Introducere

Sirena de interior PNI A014 poate fi utilizata impreuna cu un sistem de alarma la efracție montat acasa, la birou sau in alte spatii pe care doriti sa le protejati. Aceasta va suna de fiecare data cand sistemul de alarma este declansat de un senzor de miscare sau un contact magnetic.

Instalare si utilizare

Nota: Codul master care seteaza frecventa unica de comunicare intre sirena si transmitator este setat din fabrica.

Pentru a utiliza sirena impreuna cu un sistem de alarma procedati in felul urmat:

1. Conectati transmitatorul la iesirea de sirena din centrala de alarma.
2. Montati sirena intr-un loc convenabil si apoi conectati adaptorul de alimentare.
3. Declansarea sirenei: aceasta poate fi declansata direct din telecomanda sistemului de alarma apasand butonul de panica sau de un detector de miscare/contact magnetic daca sistemul de alarma este armat.
4. Oprerea sirenei: dezarmati sistemul de alarma. Sirena va mai suna inca 5 secunde, dupa care se va opri.

Specificatii tehnice

- Alimentare: 12V (cu adaptorul de alimentare din pachet)
- Intensitate sonora: 110dB
- Consum: 350mA in alarma
- Frecventa sunet: 3.8KHz \pm 10%
- Distanta intre transmitator si sirena: maxim 50m la interior

Pachetul contine:

- sirena de interior
- adaptor alimentare sirena
- transmitator alarma
- manual de utilizare

User manual

Indoor wireless siren PNI A014



Introduction

The PNI A014 indoor siren can be used with a burglar alarm system installed in your home, office or any other space you want to protect. The siren will sound every time the alarm system is activated by a motion detector or magnetic door contact.

Installation and operation

Note: The master code that sets the communication frequency between the siren and the transmitter is already set by the factory.

To use the siren with a burglar alarm system follow the steps below:

1. Connect the transmitter to the siren output of the alarm main unit.
2. Mount the siren in a convenient place and then connect it to the power adapter.
3. Alarm mode: the siren can be triggered by pressing the panic button on the remote control of the alarm system or when the alarm system is armed and a motion detector or magnetic contact is triggered.
4. To stop the siren from sounding you have to disarm the alarm system. After disarming the siren will sound an extra 5 sec then it will stop.

Technical specification

- Power voltage: 12V (with power adapter)
- Acoustic power: 110dB
- Power demand: 350mA in alarm mode
- Sound frequency: 3.8KHz \pm 10%
- Distance between transmitter and siren: max 50m indoor

Package contents:

- indoor siren
- power adapter
- alarm transmitter
- user manual

