

Remote control for car alarm PNI OV288 and PNI 288

Safety warnings

This remote control is intended exclusively for use with the PNI OV288 and PNI 288 car alarm systems. The remote control must be programmed according to the user manual or by qualified personnel.

Do not drop, hit or crush the remote control.

Only use the type of battery recommended by the manufacturer.

Learning a remote control (PNI OV288)

Power the control unit. Turn on the ignition. Open a door.

To enter learning mode, turn on the ignition and turn it off 6 times in a row, then leave the ignition on. The siren will sound and the LED will flash.

Press the buttons on the remote control to send a signal to the control unit. The LED will remain on. Press any other button, the siren will emit a short sound and the LED will turn off to confirm that the remote control has been learned.

The LED will start flashing again waiting for a new

learning process. Repeat the procedure to learn a new remote control. The system supports a maximum of 6 remote controls.

To exit learning mode, turn on the ignition.

Deleting paired remote controls (PNI OV288)

After entering learning mode, press the Reset button once. The siren will sound once briefly. Now, all the remote controls saved in the system have been deleted.

Learning a remote control (PNI 288)

Press the learning button on the control module. The indicator lights will turn on. Press a button on the remote control to send a signal to the control module. The indicator lights will turn off to confirm the remote control has been memorized. Repeat the procedure for each remote control.

Deleting paired remote controls (PNI 288)

Press the learning button on the control module for 3 seconds. The indicator lights will flash 5 times. Now, all the remote controls have been

deleted.

Technical specifications

Power supply	2 x baterii CR2016
Dimensions	80 x 30 x 10 mm
Frequency	433 MHz
Transmission power	10 mW ERP
Working temperature	-26°C ~ 80°C

Simplified EU declaration of conformity

ONLINESHOP SRL declares that the PNI OV288 and PNI 288 car alarm remote control complies with the RED Directive 2014/53/EU and the ROHS Directive 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.mypni.eu/products/3855/download/certifications>

Please download the warranty certificate



Telecomanda pentru alarma auto PNI OV288 si PNI 288

Avertizari de siguranta

Aceasta telecomanda este destinata exclusiv utilizarii cu sistemele de alarma auto PNI OV288 si PNI 288.

Programarea telecomenzii trebuie realizata conform manualului de utilizare sau de catre personal calificat.

Nu scapati, loviti sau striviti telecomanda.

Utilizati doar tipul de baterie recomandat de producator.

Invatarea unei telecomenzi (PNI OV288)

Alimentati unitatea de comanda. Puneti contactul. Deschideti o portiera.

Pentru a intra in modul de invatare, puneti contactul si luati-l de 6 ori consecutiv, apoi lasati contactul pus. Sirena va suna, iar LED-ul va clipi.

Apasati tasta  de pe telecomanda pentru a trimite un semnal catre unitatea de control. LED-ul va ramane aprins. Apasati oricare alt buton, sirena va emite un sunet scurt, iar LED-ul se va stinge pentru a confirma invatarea telecomenzii.

LED-ul va incepe sa clipeasca din nou in asteptarea unui nou proces de invatare. Repetati procedura pentru a invata o noua telecomanda. Sistemul suporta maxim 6 telecomenzi.

Pentru a iesi din modul de invatare, luati contactul.

Stergerea telecomenzilor imperecheate (PNI OV288)

Dupa ce ati intrat in modul de invatare, apasati o data butonul Reset. Sirena va suna scurt o data. Acum, toate telecomenzile salvate in sistem au fost sterse.

Invatarea unei telecomenzi (PNI 288)

Apasati butonul de invatare de pe modulul de control.

Luminile de semnalizare se vor aprinde. Apasati un buton de

pe telecomanda pentru a trimite un semnal catre modulul

de comanda. Luminile de semnalizare se vor stinge pentru a

confirma memorarea telecomenzii.

Repetati procedura pentru fiecare telecomanda in parte.

Stergerea telecomenzilor imperecheate (PNI 288)

Apasati timp de 3 secunde butonul de invatare de pe modulul de control. Luminile de semnalizare vor clipi de 5 ori. Acum, toate telecomenzile au fost sterse.

Specificatii tehnice

Alimentare	2 x baterii CR2016
Dimensiuni	80 x 30 x 10 mm
Frecventa	433 MHz
Putere de emisie	10 mW ERP
Temperatura de lucru	-26°C ~ 80°C

Declaratie UE de conformitate simplificata

ONLINESHOP SRL declara ca Telecomanda pentru alarma auto PNI OV288 si PNI 288 este in conformitate cu Directiva RED 2014/53/UE si Directiva ROHS 2011/65/EU. Textul integral al declaratiei UE de conformitate este disponibil la urmatoarea adresa de internet:

<https://www.mypni.eu/products/3855/download/certifications>

*Va rugam, descarcati certificatul de
garantie*

