 


## Remote Control

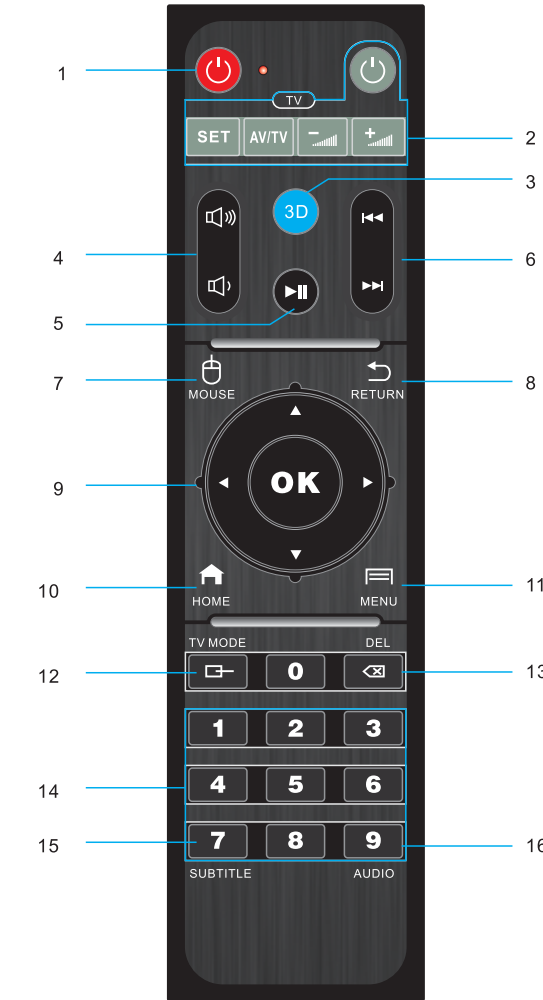

Item	Button	Description
1		Power on/off the SMART TV BOX
2		Buttons for TV
3		
4		Enter/Exit 3D mode
5		Increase/Decrease volume
6		Begin or pause playback
7		Go to previous/next page in file browser Go to previous/next chapter during BD playback Go to previous/next file during media file playback
8		Enter/Exit mouse mode. To show mouse pointer,click this mouse button first, then click any direction button.
9		Return to previous screen or exit program
10		Navigate and highlight menu items Cursor Navigation Arrow in mouse mode
11		Go to main menu
12		Access settings menu for the current function Menu is context sensitive and will be different depending on function
13		Switch between available video output modes:480i/576i/720p/1080p
14		DELETE number or character
15		

14		Insert number
15		Change subtitle track when playing video
16		Change audio track when playing video

## Learning function instruction for Five Grey TV buttons

1. Press [SET] button for 3 seconds until red LED light stays lit up. Now this remote is in Learning Mode. It would quit Learning Mode automatically after 15 seconds if no button clicked.
2. Place TV remote with this Box remote head to head, keep the distance in 1 inch.
3. Click Power button of Box remote (designed for TV), red LED light would start to flash; now click power button on TV remote. The red LED light would quickly flash 3 times, that means this button has been successfully mapped.
4. If you want to map other buttons from TV remote to Box remote, please repeat step 3.
5. Click [SET] button to quit this Box remote learning mode.



# 4K HDR SMART TV BOX Quick Guide

HiMedia Technology Limited

[www.himediatech.com](http://www.himediatech.com)

 
## Connecting to the Power Supply

- A: Connect the barrel connector of the AC adapter to the SMART TV BOX's DC IN.  
B: Connect the plug of the AC adapter to a power outlet.


## Audio and Video Connections

### 1.Connecting to your TV via HDMI

- A: Connect the HDMI cable to the SMART TV BOX's HDMI output.  
B: Connect the other end of the HDMI cable to an HDMI input on your TV.  
C: Go to Settings --> Playback --> HDMI Output --> Auto  
Go to Settings --> Playback --> SPDIF Output --> LPCM  
Go to Settings --> Playback --> HBR Degrade Output --> RAW5.1

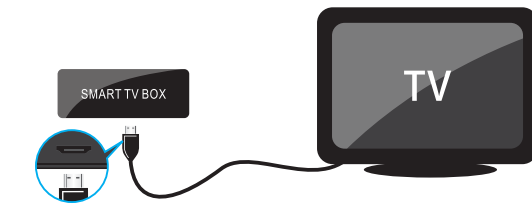


### 2.Connecting to Home Theater Receiver or Sound System(5.1CH)

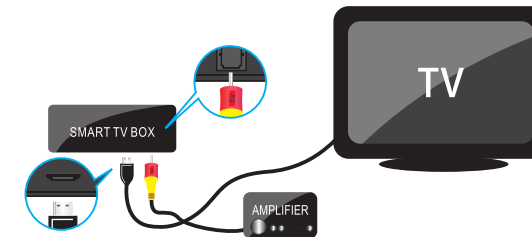 

### 3.Connecting to Home Theater Receiver or Sound System(7.1CH)

 - A: Connect the HDMI cable to the SMART TV BOX's HDMI output and connect the other end of the HDMI cable to an HDMI input on the home theater receiver or sound system.  
B: Connect the second HDMI cable to the HDMI output on the home theater receiver or sound system and connect the other end of the second HDMI cable to an HDMI input on your TV.  
C: Go to Settings --> Playback --> HDMI Output --> RAW  
Go to Settings --> Playback --> SPDIF Output --> RAW  
Go to Settings --> Playback --> HBR Degrade Output --> RAW7.1

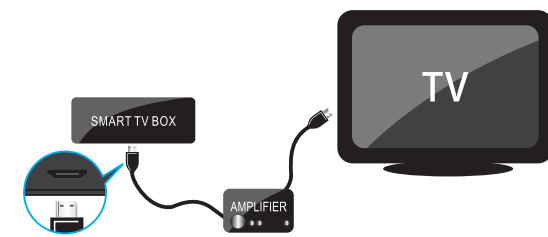

## Network Connections

### 1.Wired

- A: Connect the network cable to the SMART TV BOX's LAN port and connect the other end of the network cable to an available port on a LAN switch, router or networked wall plate.  
B: Go to Settings --> Network --> Ethernet to adjust wired settings.  
C: Please turn off Wi-Fi when using Ethernet.

### 2.Wireless

- A: Go to Settings --> Network --> Wi-Fi to adjust wireless settings.  
B: Please turn off Ethernet when using Wi-Fi.

## Getting Started



### 1.How to put on or remove apps from home page?

- PUT ON: Press "+" button on Home page-> Select the apps you want to put-> Press "OK" key on remote control-> Press "Complete" button to finish put on  
Remove: Press "My Apps" -> Select the apps you want to remove from Home page-> Press "OK" key on remote control-> Press "Cancel" button to remove

### 2.How to set one apps as default start one or Close?

- Press "My Apps" -> Select the apps you want to default start-> Press "Menu" key on remote control-> Press "Default Start" button  
Same way going here to "Close Start" or "Uninstall" one apps  
Remind: You could go to Google Play or any other third party stores to download all of your favorite android based applications, and install them onto Himedia box.



## Firmware Upgrade

### 1. Firmware Upgrade by Recovery Mode(user data will be cleared)

- A: Download a new firmware and place the firmware onto the ROOT directory of a USB drive.  
B: Plug the USB drive into an empty USB HOST on the SMART TV BOX.  
C: With the SMART TV BOX turned off, use a paper clip or pen point to press and hold the small pinhole restore button on the SMART TV BOX.  
D: While pressing the restore button, turn on the SMART TV BOX. Continue to hold the restore button for 5 more seconds, then release it.  
E: The SMART TV BOX will begin upgrading the firmware from the USB drive.  
F: Wait for the SMART TV BOX to complete the upgrade. Please be patient as it may take around 5 minutes to complete.



- G: When finished, The SMART TV BOX will auto reboot.

### 2. Fireware Upgrade from Settings Menu(user data will not be cleared)

- A: Download a new firmware and place the firmware onto the ROOT directory of a USB drive.  
B: Plug the USB drive into an empty USB HOST on the SMART TV BOX.  
C: Go to Settings --> Upgrade --> Local upgrade to select/click the letter of the USB drive.  
D: The SMART TV BOX will begin upgrading the firmware from the USB drive.  
E: Wait for the SMART TV BOX to complete the upgrade. Please be patient as it may take around 5 minutes to complete.



- F: When finished, The SMART TV BOX will auto reboot.