Thank you for using products of Zidoo. You can add our WeChat account or Weibo account to communicate and share with us.



Twitter @ zidootv



WeiChat Official Account @ zidoo



Weibo Account @ zidoo

If you need more help, please visit user forum of the official website of Zidoo for consultancy.



Official website: www.zidoo.tv



Content

01	Introduction to hardware of X10		
	Device interfaces	P2	
	Installation of hard disk	P4	
	Remote control	P5	
	Connect the device	P6	
	Performance parameters	P8	

Device interface P9 Remote control P10 Performance parameters P11

03	Initialization	P12


O4 System update by OTA P14

Introduction to hardware of X10

Device interface

Zidoo X10 is equipped with audio input & output ports and data transmission port. Please refer to the descriptions in this manual.

1 Front

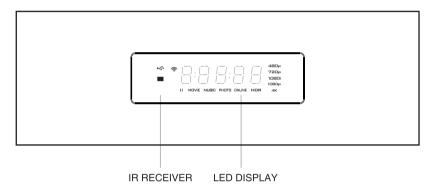


2. Right






3. Left

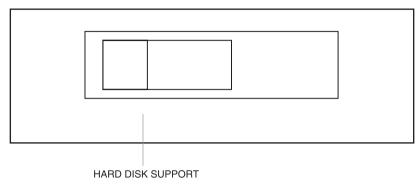

4. Back

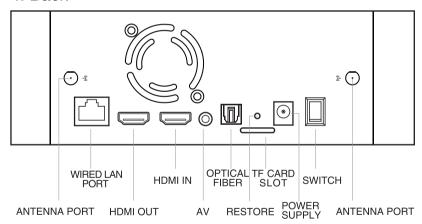

Instruction to installation of the antenna: please insert the two antennas in the parcel into the antenna ports in the above diagram.


Note:

3

- *Please load/change the hard disk after turning off the power. If it is a brand-new hard disk,
- *Please load it after formatting it.
- *Please prevent the orifice of the cooling fan from being blocked.
- *Do not touch any liquid in case the liquid runs into the inner part of the device and damages it.
- *Any maintenance personnel who are not appointed are not allowed to open the case.

Load the hard disk

X10 is equipped with hard disk storage of 3.5 inches and SATA high speed transmission port. The hard disk can be loaded by pushing it in, with no help of other tool. (The hard disk supports 10 TB at the maximum)

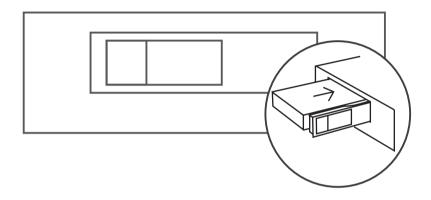


Note: Do not load or change the hard disk while the power is on in case that the device or the data of hard disk is damaged. If it is a brand-new hard disk, please format it before loading it to the device. This device support following formats of hard disk: EXT3, EXT4, NTFS, FAT32, EXFAT.



Remote control

1. Description of functions of buttons.

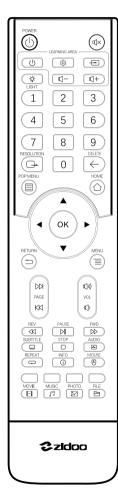

Functions	Buttons
Turn on/off	(b)
TV Learning Area	(J
VOL+/VOL-/Mute	□»)/□>/ ◎
Playback	
Mediainfo	
Pop Menu	
Page up/down	KM / DN
Mouse	<u>-</u>
Home	\Box
Return	$\widehat{}$
Menu	\equiv
Resolution	<u></u>
Light	: \$-
Delete	
Numbers	1/2/3/4/5/6/7/8/9/0
Multi-function	
Shortcut	日月四日

2.Introduction to Learning button

Learning function: This remote control can copy functions of buttons of other remote control so that it can control two devices.


Operation descriptions of Learning button:

- 1) Point the top of this remote control to that of the remote control to be copied. Align the infrared transmitting tubes.
- 2) Press in the study area of this remote control until its white backlight is lighted.
- 3) Press any button in the study area of this remote control, its white backlight ashes once.
- 4) Press the function button of the remote control to be copied. After this remote control receives the signal, the white backlight will quickly ash twice.
- 5) If there are many buttons functions need to be learned, please repeat step 3 and 4.
- 6) After completing learning, press any button outside the learn ing area of this remote control to exit learning mode. Then the white backlight of this remote control will be off automatically and completed learning.

Connect the device (applicable to X10/X9S/X8)


1. HDMI connects to the TV.

1) Cut off the power of the device. Please make sure the power of both the TV and STB are off.

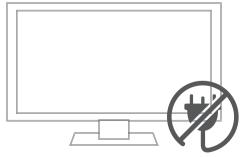



2) While the power of TV is off, insert one end of HDMI cable into HDMI OUT and insert the other end into HDMI IN port.



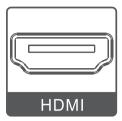


3) Connect with the power. This device is equipped with suitable DC power adapter. Please connect the head of DC power adapter to the DC power input port of this device, then insert the plug of DC power line into the alternating current socket of 110V-240V.

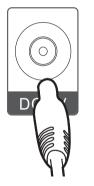

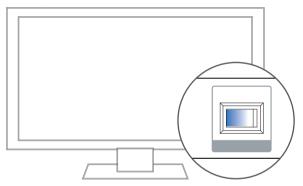

4) Corresponding video source is selected by TV.

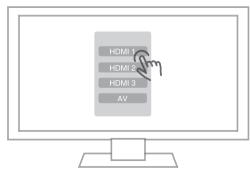

2. Connect AV cable with the TV.

The connection method is same as that of HDMI cable.

X10 Specification

	On a se Alicination of the last of the las	
Material	Space Aluminium	
Display	VFD display	
Shell	Aviation Aluminum alloy case in smoke-colored	
os	Android 6.0 + OpenWRT(NAS) dual system run simultaneously	
CPU	Realtek RTD1295 ARM Cortex-A53 Quad-Core with oating-point unit and NEON SIMD engine embedded	
GPU	ARM T820 MP3(3-core)	
Memory	2GB DDR3	
Internal Storage	16GB eMMC	
Wifi Connectivity	IEEE 802.11a/b/g/n, 802.11AC,4.900 GHz ~ 5.845 GHz (5.0 GHz ISM Band) RTK8821 dual-band WIFI	
Ethernet	1*RJ-45 Ethernet Jack (10/100/1000Mbps)	
Bluetooth	BT4.0	
HDMI Out	HDMI with HDCP 2.2 output, Support 4K@60fps Support HD Audio(7.1CH), support 23.976 and 29.94	
HDMI In	HDMI with HDCP 2.2 input, support PIP, HDMI IN stream recode and stream output via UDP etc	
Video decode	HDR, 10-bit HEVC/H.265 up to 4K @ 60fps, VP9 up to 4K @ 60 fps, H.264 up to 4K @ 24 fps, automatic frame rate switching	
Audio decode	Support HD audio(7.1ch) decode and passthrough Redesigned Native player,Blu-ray better compatibility, Powerful subtitles, Support MVC ISO,MVC MKV. Built in ZDMC	
USB	1 * USB3.0 2 * USB2.0 *External power needed if USB connects to over 1TB mobile HDD	
Power	DC 12V/3A	
other interface	1 * TF card reader SD card interface . Support1GB/2G B/4GB/8GB/16GB/32GB 1 * IR receiver 1 * AV OUT Composite video and audio port (Cvbs output) 1 * OPTICAL (2CH, 5.1CH) 2 * External high-gain Antenna 1 * HDD BAY 1 * VFD display (with LED light)	




Introduction to X9S hardware


Interface of X9S

Zidoo X9S is equipped with audio input & output ports and data transmission port. Please refer to the descriptions in this manual.


1. Front

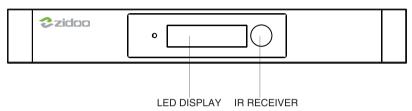

2. Right

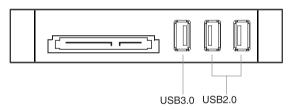

4. Back

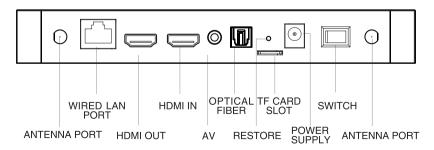


Instruction to installation of the antennas: please insert the two antennas in the parcel into the antenna ports in the above diagram.

Remote control

1.Description of functions of buttons.



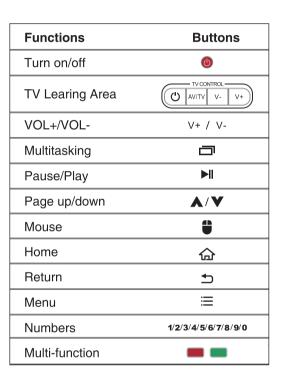



X9S Specification

Material	Space Aluminium
Display	VFD display
Shell	Aviation Aluminum alloy case in smoke-colored
os	Android 6.0 + OpenWRT(NAS) dual system run simultaneously
CPU	Realtek RTD1295 ARM Cortex-A53 Quad-Core with oating-point unit and NEON SIMD engine embedded
GPU	ARM T820 MP3(3-core)
Memory	2GB DDR3
Internal Storage	16GB eMMC
Wifi Connectivity	IEEE 802.11a/b/g/n, 802.11AC,4.900 GHz ~ 5.845 GHz (5.0 GHz ISM Band) RTK8821 dual-band WIFI
Ethernet	1*RJ-45 Ethernet Jack (10/100/1000Mbps)
Bluetooth	BT4.0
HDMI Out	HDMI with HDCP 2.2 output, Support 4K@60fps Support HD Audio(7.1CH), support 23.976 and 29.94
HDMI In	HDMI with HDCP 2.2 input, support PIP, HDMI IN stream recode and stream output via UDP etc
Video decode	HDR, 10-bit HEVC/H.265 up to 4K @ 60fps, VP9 up to 4K @ 60 fps, H.264 up to 4K @ 24 fps, automatic frame rate switching
Audio decode	Support HD audio(7.1ch) decode and passthrough Redesigned Native player,Blu-ray better compatibility, Powerful subtitles, Support MVC ISO,MVC MKV.Built in ZDMC
USB	1 * USB3.0 \ 2 * USB2.0 *External power needed if USB connects to over 1TB mobile HDD
Power	DC 12V/3A
other interface	1 * TF card reader SD card interface . Support 1GB/2GB/4GB/8GB/16GB/32GB 1 * IR receiver 1 * AV OUT Composite video and audio port (Cvbs output) 1 * OPTICAL (2CH, 5.1CH) 1 * SATA3.0 (To connect Serial ATA) 1 * VFD display (with LED light)

Initialization

Before actually using this device, this software will provide you for first initialization. Please set your device according to the initialization process to obtain the optimum watching experience.

1. Language of the system


Select the language of the system as you need.



2. Screen scaling


Adjust the screen display range using LEFT or RIGHT button of the remote control or the mouse wheel so that the image can be displayed on the screen of the TV.



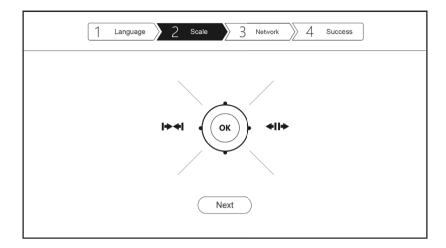

3. Network settings

Set the configuration of the network so that the device can quickly connect with the network. The network includes wifi network and Ethernet network. Select either of them and successfully connect with it.

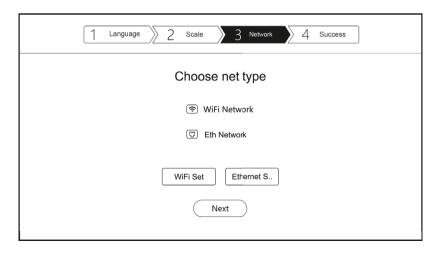

WIFI: Select SSID and enter password, connect to WIFI and finish setting;

Ethernet Network: no other operation needed but only need to insert cable and auto connect to internet. After finished the internet setting, please click Next to further step and get to know the function of the Home Page and finish initialization.




System update by OTA

Zidoo will update the firmware irregularly.


Find the system update icon in APP center and open it; support online network update and local update; after ticking "automatically detect the latest version", will receive the prompt for the latest firmware update automatically



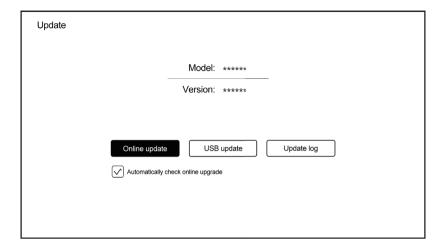

1. Online update


Click "online update" to obtain information of online update.

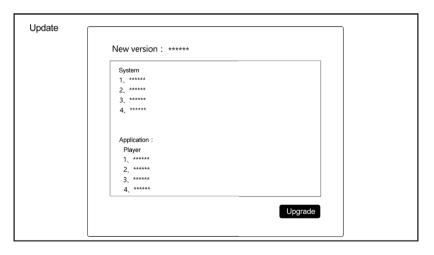


2. Local update

Users can download the update file on the forum or official website and update firmware by local update.

Copy the downloaded update file to USB disk. Click "local update" to select the update file.

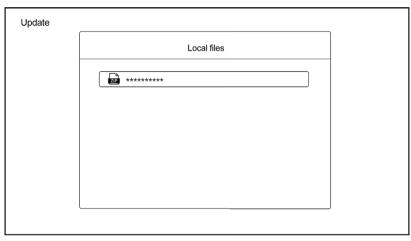


Download the update file by online update or local update. Click "update" to update.

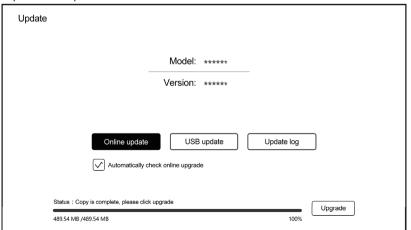




The system will automatically check the update file whether is complete or not

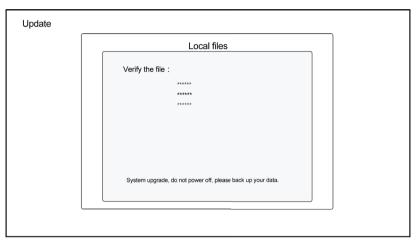

Note: Download the update file by online update or local update. Click "update" to update.

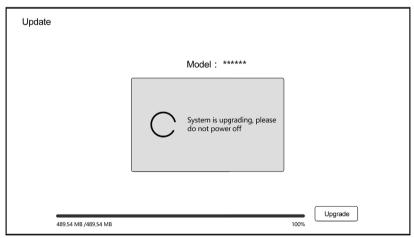

Once the update is completed, the system will automatically be restarted.



Special note: To guarantee user experience, Zidoo will update the firmware irregularly. Therefore, this manual may not be totally in line with the product.