200x145mm

# Water timer PNI WT11

## User manual

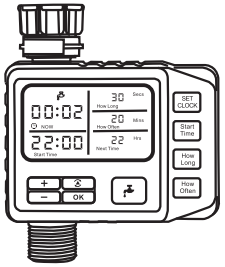

## CONTROL BUTTONS

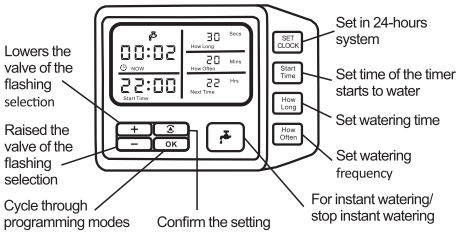


**Maximum operating pressure: 80PSI For irrigation use only**

## INSTALLING THE BATTERY

**2 × AA ALKALINE BATTERIES ARE RECOMMENDED**

Remove the battery cover – keep battery compartment dry – install the 2×AA Battery by lining up the connections.

Place the battery inside the compartment and reinstall the battery cover.

**NOTE:** When battery is first connected, it takes up to 1 minute for the battery indicator to assess the battery strength.

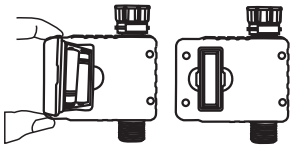

## MAINTENANCE

Remove and clean the screen washer on inlet side of the timer every few months.

Remove battery if timer is not used for an extended time.

In freezing conditions, un-install the timer and bring it indoors to prevent damage.

## HOW TO INSTALL

Attach the timer inlet to the outdoor faucet/spigot turning clockwise – hand tighten only. From the timer outlet connect a drip irrigation system or a garden hose.

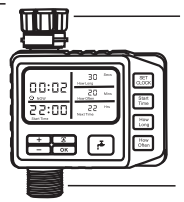

**Timer inlet:** 3/4 in. female hose thread with screen washer

**Timer outlet:** 3/4 in. male hose thread

## A SETTING - DAY&TIME

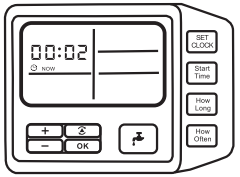

Set the current time

Push [SET CLOCK] to select hours then push [⏱] to set minutes

Adjust using [+] [−] to increasing or decreasing

After set, Press [OK] to confirm and save the setting

## B SETTING-START TIME

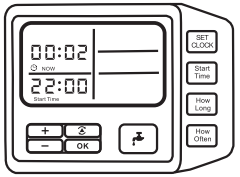

Set the first time watering

Push [Start Time] to select hours then push [⏱] to set minutes

Adjust using [+] [−] to increasing or decreasing

After set, Press [OK] to confirm and save the setting

## C SETTING - HOW LONG

Set watering time

Push [How Long] to select the watering time.

Adjust using [+] [−] to increasing or decreasing.

(Watering time is OF, 10-55seconds/per 5seconds,1-59minutes/per 1minute, 1-99hour/per 1hour)

After set, Press [OK] to confirm and save the setting

## D SETTING - HOW OFTEN

Set the watering frequency

Push [How Often] to select the watering frequency.

Adjust using [+] [−] to increasing or decreasing.

(Watering frequency is 1-59minutes/per 1minute,1-23hours/per 1hour , 1-7days/per 1day )

After set, Press [OK] to confirm and save the setting.

## E MANUEL OPERATION

To instantly water. Push [⚒] 3seconds until show in screen.

Then how long screen will flash. You can adjust water time by [+] [−] .

After setting. Press [OK] to confirm. then when time arrive, it will stop by itself.

when you want to stop it directly .Press [⚒] 3seconds, It can stop this time.

These operate will not influence the automatic setting.

## Simplified declaration of conformity

ONLINESHOP SRL declares that the PNI WT11 Water timer complies with the EMC Directive 2014/30/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://www.mypni.eu/products/10094/download/certifications

## Warranty certificate

The commercial guarantee does not affect the rights of the consumer provided by the applicable legislation in force, namely Emergency Ordinance 140/28.12.2021 regarding certain aspects related to contracts for the sale of goods, OG 21/1992 regarding consumer protection with subsequent amendments and additions and Law 296/2004 regarding the consumption code with subsequent changes and additions.

200x145mm

# Programator pentru irigare PNI WT11

## Manual de utilizare

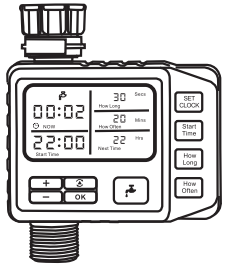

## Taste si functii

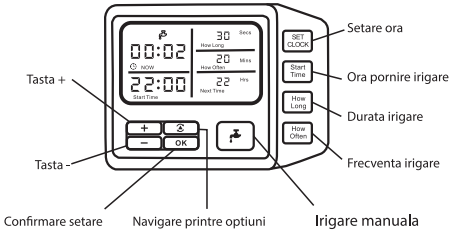


**Presiune maxima suportata: 80PSI**

## Instalare baterii

### Sunt necesare 2 baterii alcaline AA

Desfaceti capacul de pe compartimentul pentru baterie, instalati bateria si puneti capacul la loc.
Inchideti bine capacul pentru a pastra rezistenta la apa a programatorului.
NOTA: la un minut dupa instalarea bateriei, va fi afisata pe ecran pictograma de baterie incarcata.

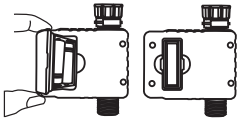

## Intretinere

Curatati periodic programatorul si conectorii acestuia.
Daca nu folositi programatorul o perioada mai lunga de timp, scoateti bateria din programator.
Daca se anunta conditii de inghet, deconectati programatorul de la instalatia de irigare si depozitati-l la interior.

## Instalare

Conectati robinetul de apa la conectorul de intrare al programatorului.
In iesirea programatorului conectati sistemul de irigatii sau un furtun de gradina.

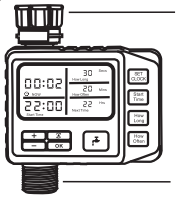


## A Setare data si ora

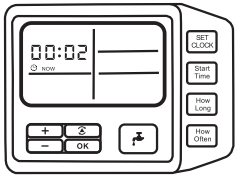

Rotiti butonul pe optiunea SET CLOCK
apoi apasati
pentru a seta ora si minutele.
Apasati + − pentru a creste sau descreste valoarea. Apasati OK pentru a confirma.

## B Ora pornire irigare

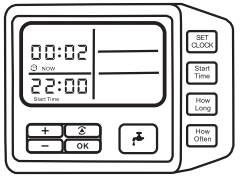

Rotiti butonul pe optiunea SET TIME
apoi apasati
pentru a seta ora si minutele.
Apasati + − pentru a creste sau descreste valoarea. Apasati OK pentru a confirma.

## C Durata irigare

Rotiti butonul pe optiunea HOW LONG
Apasati + − pentru a creste sau descreste valoarea. Optiuni: OFF, 10-55sec/5 sec., 1-59 min/1 min, 1-99 ore/1 ora
Apasati OK pentru a confirma.

## D Frecventa irigare

Rotiti butonul pe optiunea HOW OFTEN
Apasati + − pentru a creste sau descreste valoarea.
Optiuni: 1-59 min/1 min., 1-23 ore/1 ora, 1-7 zile/1 zi
Apasati OK pentru a confirma.

## E Irigare manuala

Apasati timp de 3 secunde pana cand pictograma apare pe ecran.
Setati durata de irigare apasand butoanele + −
Apasati OK pentru a confirma.
Cand timpul setat a expirat, irigarea se va opri automat. Daca doriti sa opriti manual irigarea, apasati timp de 3 secunde butonul

## Declaratie de conformitate simplificata

ONLINESHOP SRL declara ca Programator irigatii PNI WT11 respecta Directiva EMC 2014/30/UE. Textul integral al declaratiei de conformitate UE este disponibil la urmatoarea adresa de internet: https://www.mypni.eu/products/10093/download/certifications

## Certificat de garantie

Garantia comerciala nu afecteaza drepturile consumatorului prevazute prin legislatia aplicabila in vigoare, respectiv Ordonanta de Urgenta 140/28.12.2021 privind anumite aspecte referitoare la contractele de vanzare de bunuri, OG 21/1992 privind protectia consumatorilor cu modificarile si completarile ulterioare si Legea 296/2004 privind codul consumului cu modificarile si completarile ulterioare.