


USER MANUAL
NIGHT LIGHT PNI ELF1000S
FOR BABIES ROOM



Main components:

- Elf Night Light
- Recharging cradle
- 5V1A adaptor
- User Manual

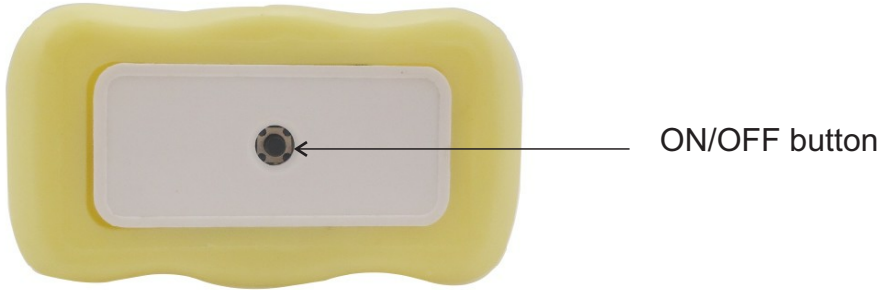

ON/OFF button:

Press once – the night light is on and keeps changing the colours (red / green / blue)

Press twice – the night light will keep constant in one colour randomly

Press thrice – the night light will be off.

Caution:


The Elf night light can be turned on only if it is away from the recharging cradle.

When the Elf night light is put onto the cradle with power supply, the light will be off automatically.



Recharging mode:

Connecting the DC adaptor with the proper AC power supply

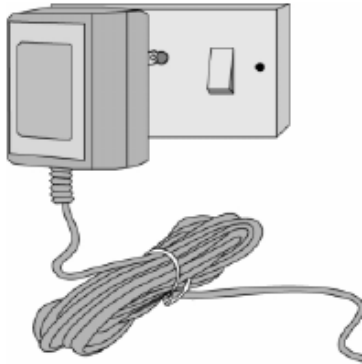

Connecting the other side of the DC adaptor to the recharging cradle DC jet.

When putting the Elf night light onto the recharging cradle, there may be three occasions.

A blue LED showing on the Elf night light body indicates the bad contact between the recharging cradle and the Elf night light.

The blue and red LEDs keep flashing alternatively indicates the Elf night light is being recharged properly.

A red LED on the Elf night light indicates the completion of the recharging process.

Caution:

If the 5V DC adaptor is not connected with the power supply, the LEDs will not be on.

Users are advised to recharge the Elf night light after first purchase

Troubles-shooting:

Trouble	Reason	Solution
No light when pressing the On / Off button	1. Out of battery 2. Not pressing the button properly	1. Recharge the Elf Night Light 2. Press the button again
LEDs are not on properly when the Elf night light is on the recharging cradle.	1. Bad contact between the Elf night light and the recharging cradle 2. No connection between the DC adaptor and the recharging cradle	1. Please replace the Elf night light on the recharging cradle 2. Please well connect between the DC adaptor and the recharging cradle
The Elf night light is not bright enough.	Low power of the battery	Recharge the Elf night light.

Product specification:

ELF Night Light	Operating current	10-40mA±2mA
	LED colours	Rosu/Verde/Albastru
	Dimensions	128.8x96x50 mm
	Weight	125 g
Baza de incarcare	Operating current	160mA±20mA
	Recharging current	190mA±20mA
	Dimensions	112.5x73.5x31.5mm
	Weight	85 g
General	Operating temperature	0 - 80°C
	Storage temperature	25°C
	Operating ambient humidity	20%-80%RH

